


NURSAL

Sound Machine

User Manual

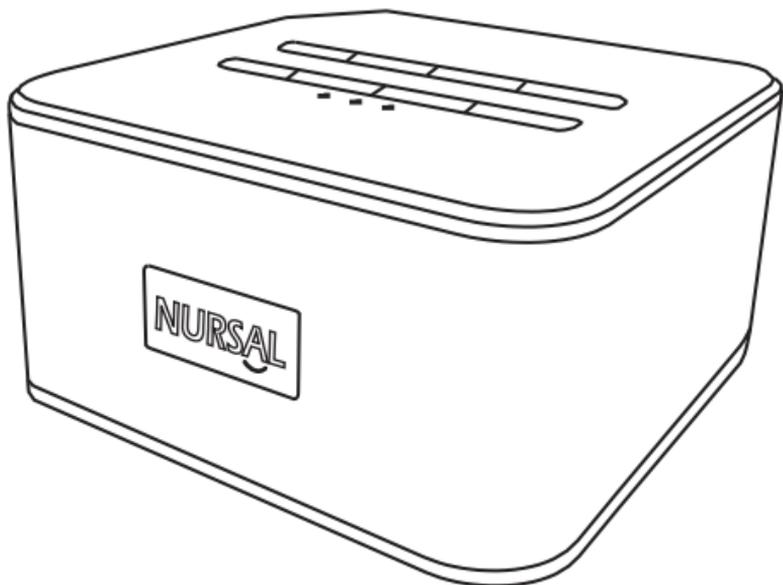

Care for Your Loved Ones

facebook.com/nursalonline

www.nursal.co/warranty

A Big Thank You

We're thrilled that you have chosen to purchase the Sound Machine.

At NURSAL, we're committed to providing you with products that enhance your daily life. We also aim to give our customers excellent support. Should you have any questions or feedback about your new product, simply get in touch with our customer support team at 1-855-556-6888, or by email at support@nursal.co

Enjoy your new product!

ACTIVATE YOUR 12 MONTH WARRANTY & EXCLUSIVE GIFT

Register within 2 weeks after receiving your new product.

PLEASE VISIT NOW

[→www.nursal.co/warranty](http://www.nursal.co/warranty)

CUSTOMER SERVICE

[✉ support@nursal.co](mailto:support@nursal.co)

[f @nursalonline](https://www.facebook.com/nursalonline)



NOTE

1. Replace batteries when the sound becomes low or the LED indicator dims.
2. Refer to the user manual for the order the sounds are played.
3. Remove batteries if the device is not used for long periods.

CONTENTS


PACKAGE CONTENTS.....	01
TYPE OF SOUNDS	01
PRODUCT DIAGRAM	02
INSTRUCTIONS FOR USE	03
BATTERY INSTALLATION	04
BATTERY PRECAUTIONS	04
PRECAUTIONS	05
COMMON PROBLEMS AND SOLUTIONS.....	07
GENERAL SPECIFICATIONS	08
FCC STATEMENT	08

PACKAGE CONTENTS


Size: 5.4inch*5.4inch*2.7inch



1 x Sound device

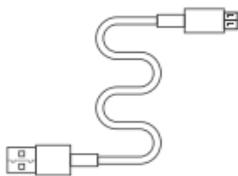

1 x USB power cable

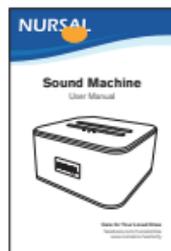

1 x User manual

TYPE OF SOUNDS



FAN SOUNDS



WHITE NOISE



Rainforest



Birds



Waves



Summer night



Clock



Brook




Rain




Mother's heartbeat

PRODUCT DIAGRAM

TOP VIEW

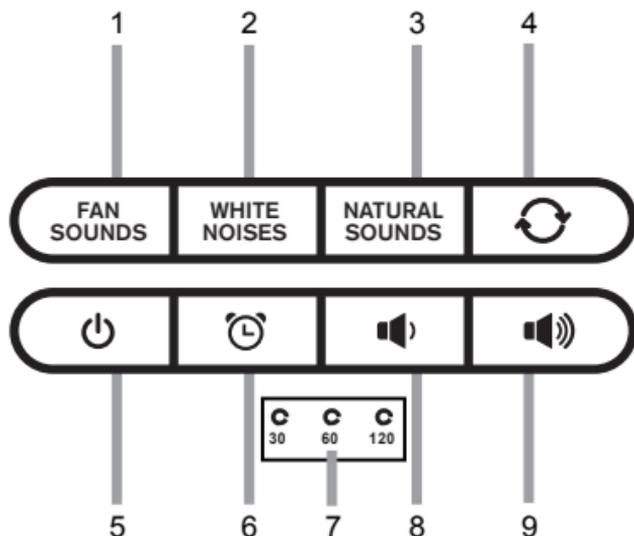

REAR VIEW

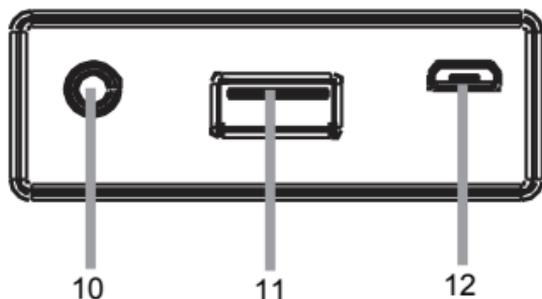

- 1. FAN SOUNDS
- 3. NATURAL SOUNDS
- 5. Power on/off button
- 7. 30/60/120 mins indicator
- 9. Volume up button
- 11. USB charging port

- 2. WHITE NOISE
- 4. Loop sound button
- 6. Timer button
- 8. Volume down button
- 10. Earphone jack
- 12. DC IN

INSTRUCTIONS FOR USE


1. Use the included USB charging cable to power the device. Or insert 4 x "AA" batteries into the battery compartment at the bottom of the device (batteries not included).
2. Press the power button to turn the device on.
3. Playing sounds:
 - Press the FAN SOUNDS button repeatedly to switch to different fan sounds, there are 8 types of fan sounds in total.
 - Press the WHITE NOISE button repeatedly to switch to different white noise sounds, there are 8 types of white noise sounds in total.
 - Press the NATURAL SOUNDS button repeatedly to switch to different natural sounds, there are 8 types of natural sounds in total.
4. Press the  button, the green indicator light on the device will flash three times, indicating it has entered loop mode. Starting with the current sound, it will play each sound in a looped sequence for 3 minutes. Press the button again to cancel loop mode. Press the  or  button to adjust volume.
5. Use the Volume button to adjust the volume level. There are a total of 16 volume levels.
6. Press the  button repeatedly to set sleep timer to 30/60/120 minutes. The indicator will display below the selected time. The unit will power off when the chosen time has been reached.
7. Earphones can be used by inserting them into the earphone jack. The device has smart memory function, will automatically resume
8. in the same state as when previously turned off. If the device is unplugged or the batteries are removed, the device will revert to the default settings.
9. Press the Power button again to turn off the device.

▲NOTE:

Use the 5V USB charging port to charge compatible external devices. The unit cannot charge external devices when powered by AA batteries.

BATTERY INSTALLATION

1. Push and lift out the battery cover as shown in Fig.1.
2. Insert 4 x "AA" batteries in the correct position as shown in Fig.2
3. Replace the battery cover.

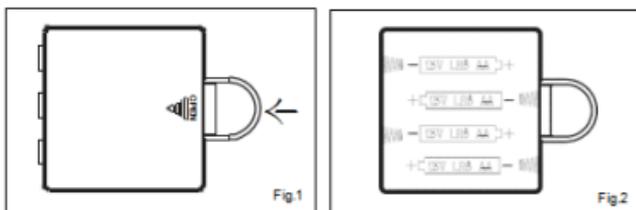

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. **Warning:** Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type of battery.
2. Use only the size and type of battery specified.
3. Be sure insert the batteries facing the correct polarity as indicated in the battery compartment. Reversed polarity batteries may cause damage to the device.
4. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with new ones.
5. If the batteries in the device are completely drained or the device will not be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
6. Do not try to recharge non-rechargeable batteries; they can overheat and rupture. (Follow battery manufacturer's instructions.)
7. Do not expose the batteries to excessive heat such as sunshine or fire.
8. Remove batteries promptly if drained.
9. Clean the battery contacts on the device prior to battery installation.

PRECAUTIONS

1. Read, Keep and Follow these instructions

All the safety and operating instructions should be read before the appliance is operated, kept for future reference and followed.

2. Heed all warnings

All warnings on the appliance and in the operating instructions should be adhered to.

3. Do not use this apparatus near water

The appliance should not be used near water; for example, near a bath tub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

4. Clean only with a dry cloth

The appliance should be cleaned only as recommended by the manufacturer.

5. Do not block the speaker vents on the front of the device

Otherwise the volume will be reduced and the sound quality will be degraded.

6. Do not install near any heat sources

such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

7. Be sure to use a suitable adapter or USB output (5V 0.5~3A)

8. Only use attachments/accessories specified by the manufacturer

9. Unplug this apparatus during lightning storms or when unused for long periods of time

10. Refer all servicing to qualified service personnel

Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

11. Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

12. Object and liquid entry

Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

13. Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

14. Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

15. Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

COMMON PROBLEMS AND SOLUTIONS

PRODUCT DIAGRAM		
SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	The unit is not connected to power source	Connect the USB adapter to the unit and wall outlet by USB charging cable
	The batteries are drained	Replace with new batteries
No sound or sound weak	Volume level in minimum position	Raise the volume level by pressing the  Button on the top of unit
Sound distortion/rattle	Volume level too high	Reduce the volume level by pressing the  Button on the top of unit
Abnormal sound	Low battery	Replace with new batteries
Indicator dimming		
 Please contact the distributor if you can't solve the problem, do not disassemble the unit by yourself!		

GENERAL SPECIFICATIONS

Power input: DC 5V  1A
4*AA batteries (not included).

Audio output: 2x2W.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NURSAL

✉ support@nursal.co

▶ www.nursal.co

☎ 1-855-556-6888



WEEE-Nr: DE83395812

Made in China